


# HOW TO ATTACH YOUR BREAKAWAY CABLE

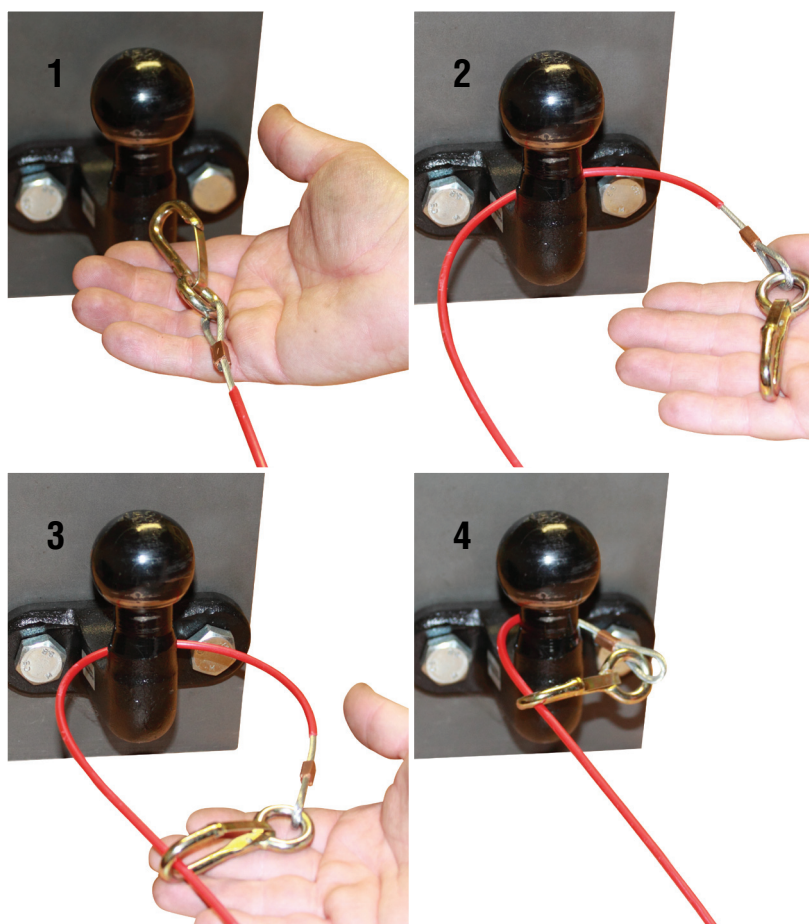

It's vital that your breakaway cable is connected correctly as it is a legal requirement, and in an emergency may be called upon to activate your caravan brakes.

## HOW TO CORRECTLY ATTACH YOUR BREAKAWAY CABLE

- 1 Check that the cable runs as straight as possible and that it cannot snag on anything.
- 2 Loop the cable around the back of the towball. Only attach the cable to the towball, not any other accessory, such as a bumper protector plate.
- 3 Clip the cable back onto itself.
- 4 Pull the cable to tighten the loop, so the cable is securely wrapped around the towball.

Check the slack in the cable: there should be sufficient slack to allow the vehicle and trailer to articulate fully without causing the cable to become taught, applying the brakes, but not so much that the cable can drag on the ground.

AL-KO Breakaway Cables are available at [www.al-ko.co.uk](http://www.al-ko.co.uk)

This HOW TO guide is suitable for connection to the AL-KO Extended Neck Towball. For detachable towballs seek advice from the towball supplier.